


### INITIAL SET UP

1. To start you will need an installed motorised blind, remote control and push pin/paper clip/pen. For installation, please follow Powershade Assembly Instructions.
2. Make sure when fitting the blind into the brackets that the motor with **RED button** & charge port are facing downwards (towards you).
3. Reset the motor by pressing and holding the **RED button** in the headrail for approx **8 SECONDS** until the motor **JOGS TWICE**.

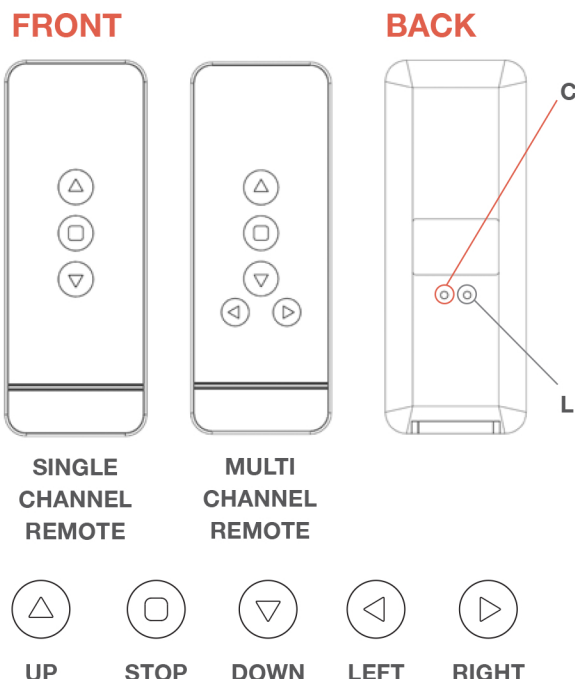

### LINK REMOTE TO MOTOR

4. To link the remote control to the motor, first press and hold the **RED button** on the motor until the motor **JOGS ONCE**.
5. If using a multi-channel remote control, select the desired channel. Use the ◀ ▶ buttons to select channel. If not using multi-channel remote, continue to step 6.
6. Press “**C**” on the back of remote control until the motor **JOGS ONCE**. The remote control is now linked and ready to be set.





### CHANGING MOTOR DIRECTION

7. Check whether the motor is turning in the correct direction. To do this, press the ▼ button on the remote control. If the blind moves down, the motor direction does not need to be adjusted. If pressing the ▼ button raises the blind, you need to adjust the motor direction.
8. To change the motor direction: press and hold both “**L**” and ◻ button (*TIP: Press “**L**” button on the back of the remote first*). The motor will **JOG ONCE** to confirm change. Check the blind is now moving in the correct direction for the arrows. If not, please repeat step 8.





### SET BLIND LOWER LEVEL

9. Press and hold “**L**” on the back of the remote control until the motor **JOGS THREE TIMES**. The motor is now in **LEVEL SETTING MODE**.
10. Press the ▼ button on the remote control. The blind will begin to lower.
11. When the blind is nearing the preferred lower level, press the ◻ button on the remote control.
12. Press ◻ ▼ buttons to accurately position the lower level.
13. When the blind has reached the correct position, press “**C**” on the back of remote control.
14. The motor will **JOG ONCE** to confirm level position is set. This concludes the lower level setting but the motor is still in **LEVEL SETTING MODE**.

## SET UPPER LEVEL

15. Press  button on the remote control. The blind will begin to rise.
16. When the blind is nearing the preferred upper level press the  button on the remote control.
17. Press the   buttons to accurately position the upper level.
18. When the blind has reached the correct position, press “C” on the back of the remote control.
19. The motor will **JOG ONCE** to confirm level position is set. This concludes the upper level setting. The motor has now exited **LEVEL SETTING MODE**.


 
## SET MID LEVEL

20. To set a mid level, run the blind to the desired position using the   buttons on the remote control.
21. Press and hold both “L” and  until the motor **JOGS ONCE** (*TIP: Press “L” button on the back of the remote first*). The mid level position is now set.
22. When the blind is in the upper or lower level positions only, press the  button for the blind to cycle to the mid level position.

## GROUPING

23. Program each blind as per standard programming instructions (steps 1-22).  
Select which blinds are to be grouped. (*We recommend grouping a **maximum of 5 blinds** per channel*).

### **For each blind to be grouped:**

24. Firstly, press and hold the **RED button** on the motor until the motor **JOGS THREE times**.  
This breaks any link to a remote, but keeps the limits already programmed.
25. Press and hold the **RED button** on the motor until the motor **JOGS ONCE**.
26. If using a multichannel remote, select which channel is to be used.  
(Skip this step if using a single channel remote).
27. Press the “C” **button** on the back of the remote to link the remote to the motor.
28. Repeat steps 24-27 for remaining blinds that are to be grouped.
29. Once you have grouped all your blinds, using the  or  buttons on your remote control will operate all selected blinds together. The individual limit presets of each blind will be retained.

## CHARGING

1. Your blind battery requires charging approx every 6 months\*. When your blind starts to run slowly, the battery needs to be charged.  
*\*This can vary depending on size of the blind, weight of the fabric and the amount of useage.*
2. Connect the supplied recharger, and charge the battery for 5-6 hours.
3. The recharger light will turn from **RED** to **GREEN** when charged. When the light turns green we recommend charging for a further hour to ensure a full charge.