



DO NOT OPEN
PACKAGE WITH
A KNIFE


YOU SHOULD HAVE



BRACKETS

Depending on your drop you will either have 2, 4 or 6 of these brackets.

ITEMS REQUIRED

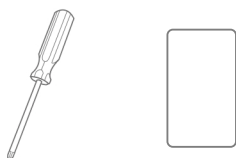


TOOLS REQUIRED

- Small Screwdriver
- Credit card sized item



1.
Once you have opened the packaging, lay out the pieces as pictured below. The top and bottom parts of the frame will be joined by a cord.

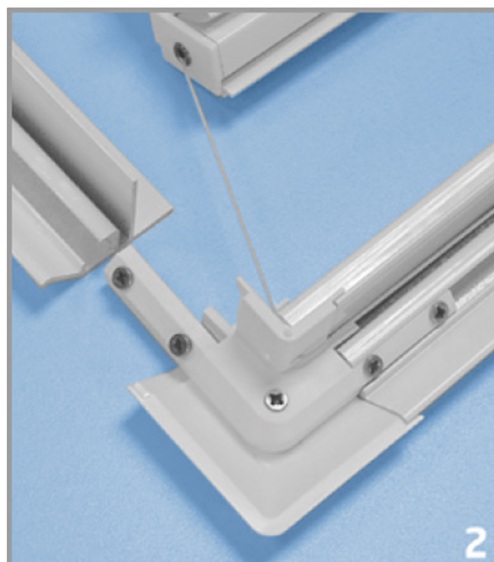

2.
Keeping the side cord out of the way, take one of the side pieces of frame and insert it into the bottom corner and then in to the top corner. Repeat for the opposite side.

If you prefer, we have a video guide available. Just scan this QR code with your phone camera.





3.
Make sure all the corners are pushed in tightly and tighten the all corner screws.




4.
Now you frame is fully assembled. There maybe some extra cord on the bottom frame section, just wrap this around itself to keep it out the way. DO NOT cut this extra cord off.

FITTING THE FRAME

Place a credit card sized object in to each corner of the window and insert the brackets directly above. If the brackets are hard to insert, then add a small amount of washing up liquid to the edge and insert. Brackets must be pushed in all the way, until the seal meets the corner. Once all brackets are inserted, offer up the Perfect Fit frame and push to click in place. If your brackets are slightly out they can be pushed up or down with a small amount of force using a flat headed screwdriver.

Slide the brackets in directly above the credit card sized object

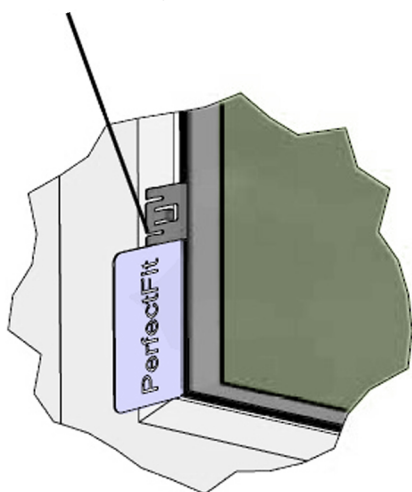

To operate: Use the wand to tilt the Venetian slats and the handle to lift up and down. Only lift the blind up/down when the slats are in the open position.