

### HOW TO MEASURE FOR YOUR PERFECT FIT BLIND

#### You will need:

- A tape measure
- A ruler or a depth gauge
- A pencil

#### YBD tips:

- Be as accurate as possible,
- Don't round up or down
- Use mm when possible
- Only measure the visible glass

#### Pre-measure checks

Does your window have a rubber bead/seal. This will be located between the frame of your window and the glass. It cannot be any wider than 6mm.


If you have no rubber bead/seal Perfect Fit blinds will not fit on your window.

If you have lead strips on the inside of your glass, Perfect Fit blinds will not fit on your window.



1. Ensure there is at least a 25mm clearance from the edge of the visible glass to any handles or air vents.

2. Use either a straight edge item like a small ruler 2(a) or a depth gauge 2(b) to measure for your bracket depth. The measurement is from the face of the glass to the face of the window frame. The bracket sizes available are 18, 20, 22, 24, 30 & 38. 95% of windows will use between 18-22. If you are in between exact sizing, we have an option to specify a second set of brackets if needed.

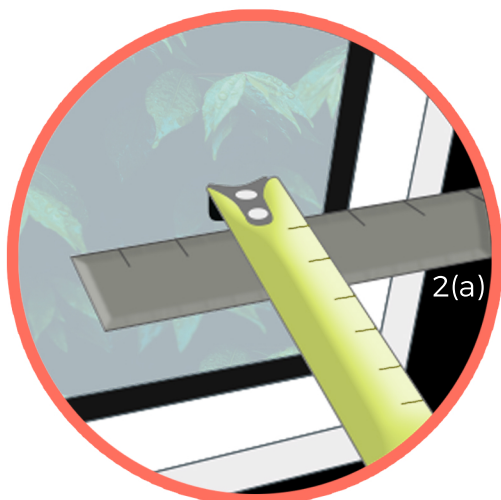


### HOW TO MEASURE FOR YOUR PERFECT FIT BLIND



3.

Measuring the visible glass only, use a tape measure and measure the glass at 3 width locations. Top, middle and bottom.

Take the shortest of the three and write it down, this will be your width when ordering.

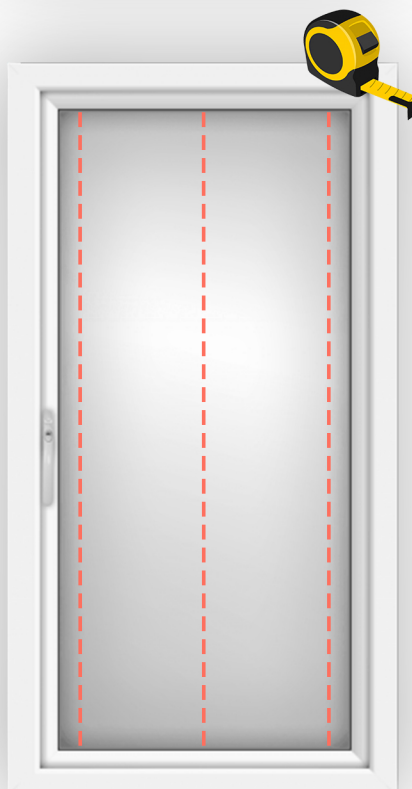

4.

Measuring the visible glass only, use a tape measure and measure the glass at 3 drop locations. Left, middle and right.

Take the shortest of the three and write it down, this will be your drop when ordering.

If you prefer, we have a video guide available.  
Just scan this QR code with your phone camera.

